

快速入門指南

Quick start guide

請先讀我

Please read me first

歡迎

Welcome

謝謝您選購adon 2100T播放機。

本指南為您設定提供逐步說明。

Thank you for purchasing the adon 2100T player.

 
 
This guide provides step-by-step instructions for you to set up.

開始之前

Before the start




包裝盒中物品清單

List of items in the box

快速入門指南		2100T CD player	
使用指南 User guide		遙控器 Remote control	
碟壓 Disc pressure		電源線 Power cable	

基本連接所需物品

   Items required for basic connection

 AMP (另購) Power amplifier (purchased separately)	 揚聲器 (另購) Speaker (purchased separately)	 揚聲器電纜 (另購) Speaker cable (purchased separately)
--	--	--

- 請注意，本手冊中的插圖為示意圖，可能與實物有差異。
- Please note that the illustrations in this manual are schematic diagrams and may differ from the actual product.

設定步驟

Setup steps

設定過程包括四個步驟。


The setup process includes four steps.

- 1 AMP連接揚聲器
AMP Connected speakers.
- 2 2100T連接到AMP
2100T connects to AMP.
- 3 連接電源
Connect the power supply.
- 4 播放音樂
Play music.


1

AMP連接揚聲器

AMP Connected speakers.

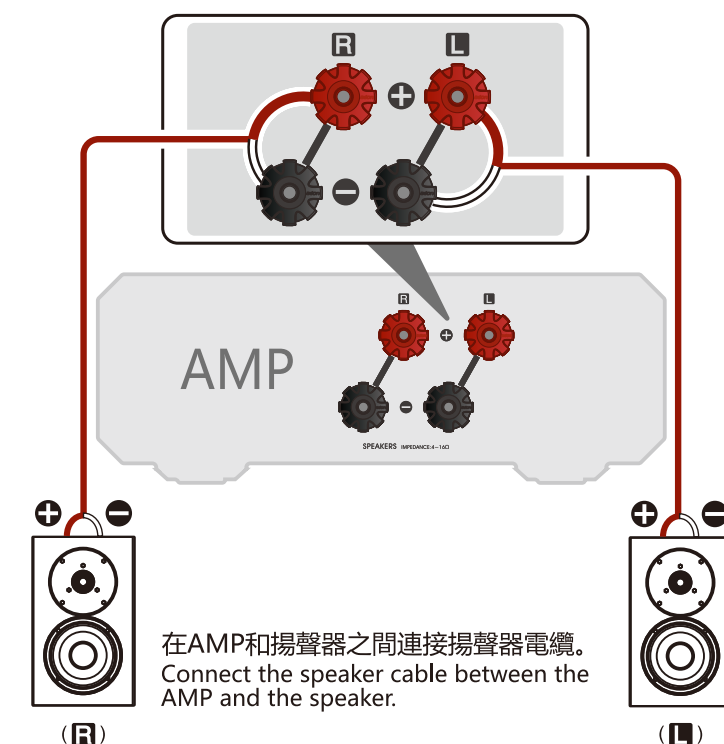


2 2100T連接到AMP 2100T connects to AMP.

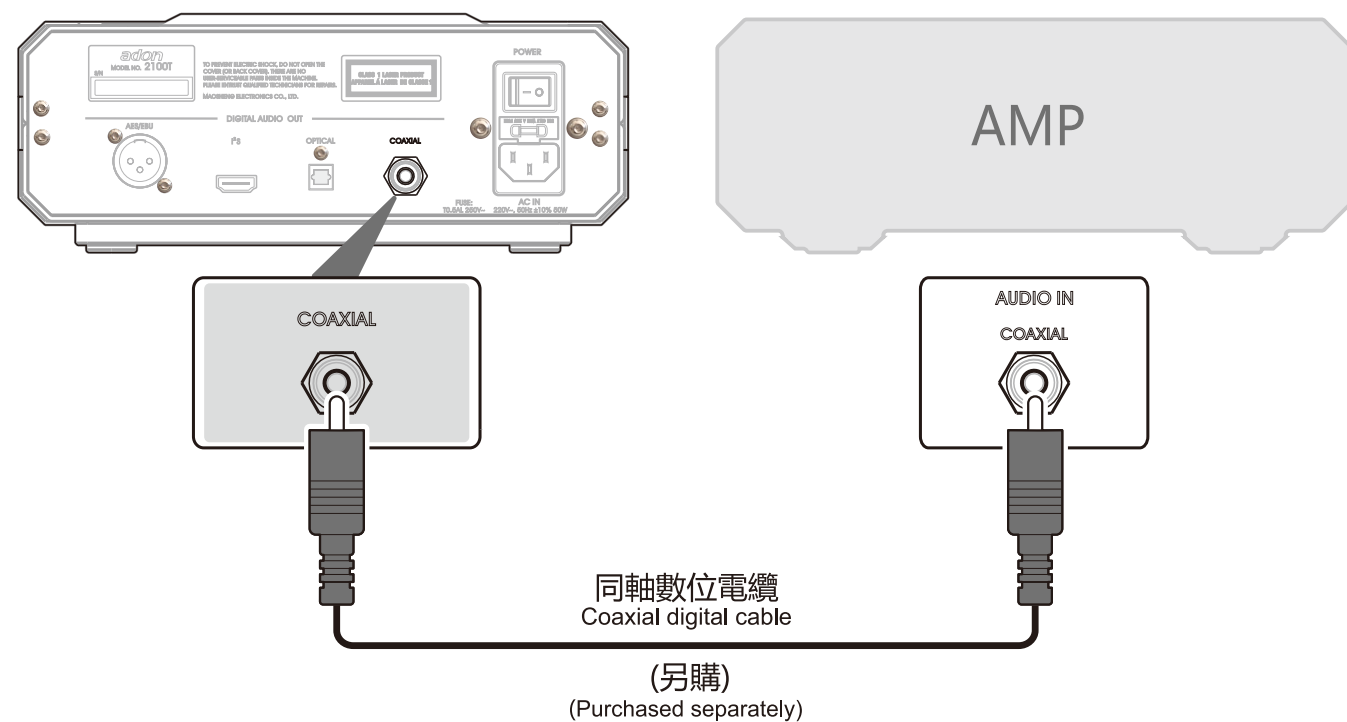

3


4 調節音量。 Adjust the volume.

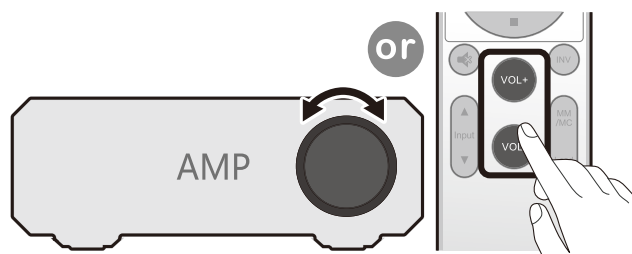

開始欣賞!
Start enjoying!


5

3 連接電源 Connect the power supply.

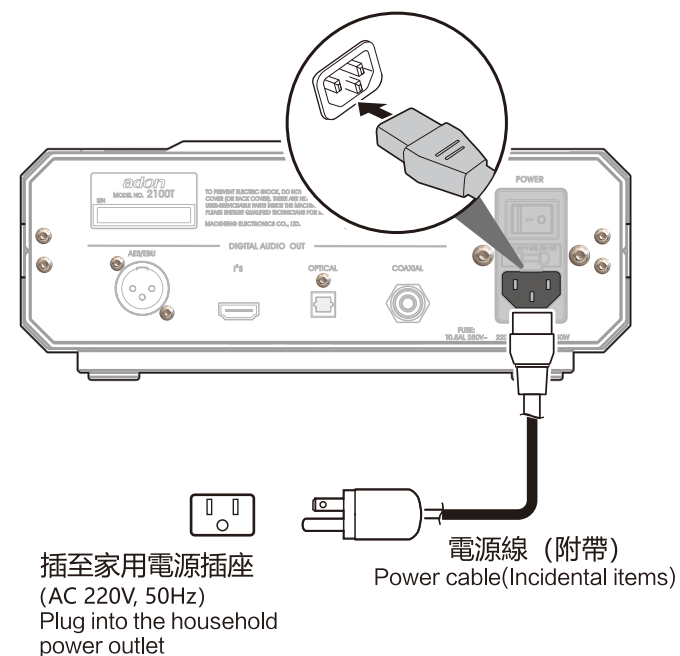

4 播放音樂 Play music.

- 1 向後推動碟蓋打開碟倉，放入CD並關閉碟倉。
Push the disc cover back to open the disc compartment, insert the CD, and close the disc cover.
- 2 按下電源開關開機（後面板）。
Press the power switch on the rear panel.
- 3 按 ▶/|| 鍵（前面板）或 ▶/|| 鍵（遙控器）播放CD，其間可用 ◀◀ 鍵/ ▶▶ 鍵進行選曲。
Press the ▶/|| button (front panel) or the ▶/|| button (remote control) to play the CD, during which the ◀◀ button / ▶▶ button can be used to select music.

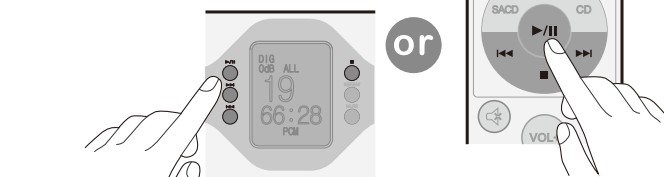

4

操作說明書 Operating instruction

- 有關其他功能資訊和操作步驟詳情，請參閱使用指南。
For additional functional information and step-by-step details, see the user guide.



- 有關更多資訊，請訪問 www.adonhifi.com。
For more information, please visit www.adonhifi.com.

6