



2100SACD

Compact Disc Player

快速入门指南

Quick start guide

请先读我

Please read me first

欢迎

Welcome

感谢您选购adon 2100SACD播放机。
本指南为您设定提供逐步说明。

 
Thank you for purchasing the adon 2100SACD player.
This guide provides step-by-step instructions for you to set up.

开始之前

Before the start




包装盒中物品清单

List of items in the box

 2100SACD CD player	碟压 Disc pressure	
	减震脚垫 x6 Spike pad	
遥控器 Remote control		

基本连接所需物品

   Items required for basic connection

 AMP (另购) Power amplifier (purchased separately)	 扬声器 (另购) Speaker (purchased separately)	 扬声器电缆 (另购) Speaker cable (purchased separately)	 电源线 (另购) Power cable (purchased separately)
--	---	--	--

- 请注意，本手册中的插图为示意图，可能与实物有差异。
- Please note that the illustrations in this manual are schematic diagrams and may differ from the actual product.

设定步骤

Setup steps


设定过程包括四个步骤。

The setup process includes four steps.

- 1** AMP连接扬声器
AMP Connected speakers.
- 2** 2100SACD连接到AMP
2100SACD connects to AMP.
- 3** 连接电源
Connect the power supply.
- 4** 播放音乐
Play music.

1 AMP连接扬声器





AMP Connected speakers.

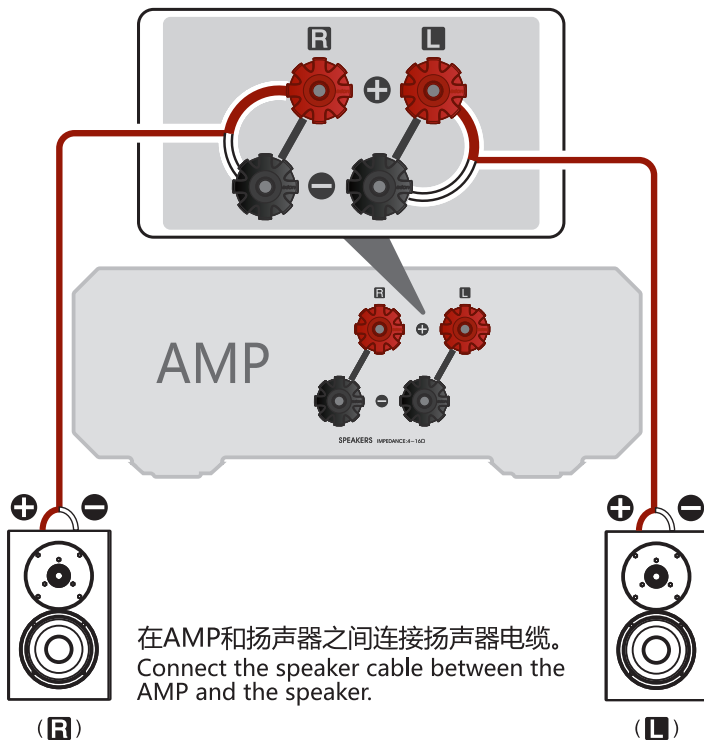

2

2100SACD连接到AMP

2100SACD connects to AMP.

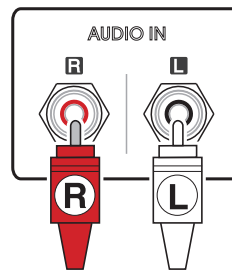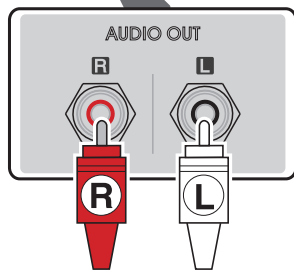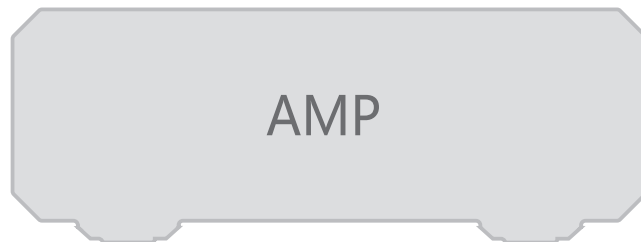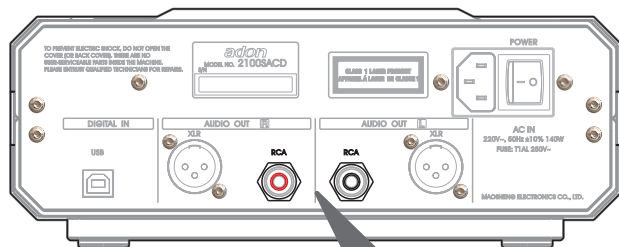


音频电缆 (RCA)
Audio cable (RCA)

(另购)
(Purchased separately)

3

连接电源

Connect the power supply.

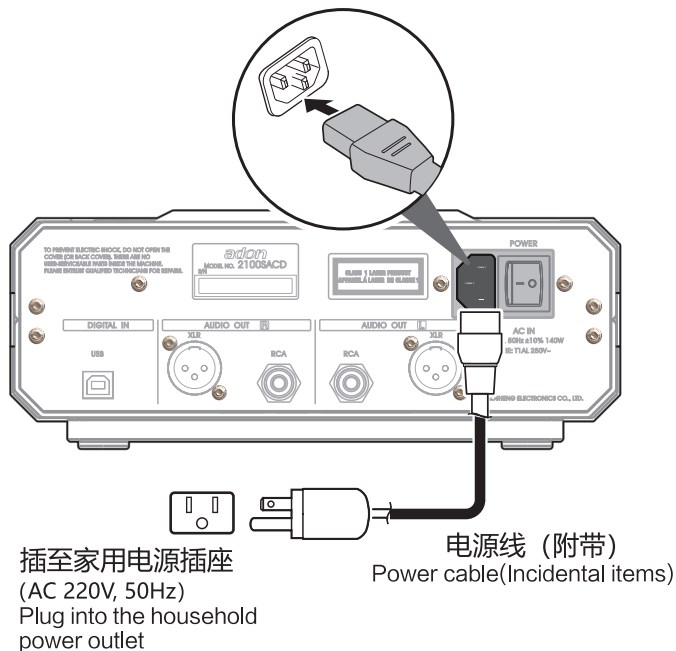

4

播放音乐

Play music.


播放CD

Play CD.

1

向后推动碟盖打开碟仓，放入CD并关闭碟仓。


Push the disc cover back to open the disc compartment, insert the CD, and close the disc cover.

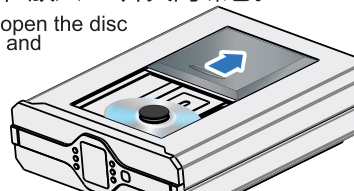

2

按下电源开关开机 (后面板)。


Press the power switch on the rear panel.

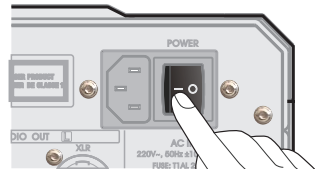

3


按 ►/|| 键 (前面板) 或 ►/|| 键 (遥控器) 播放CD, 其间可用 ◀◀ 键/ ▶▶ 键进行选曲。

Press the ►/|| button (front panel) or the ►/|| button (remote control) to play the CD, during which the ◀◀ button / ▶▶ button can be used to select music.

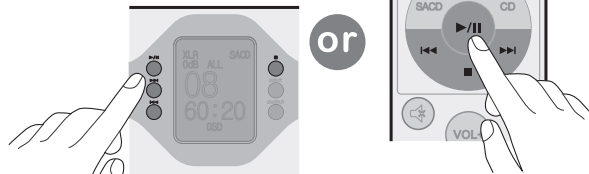

通过USB收听计算机音频

Listen to computer audio via USB.

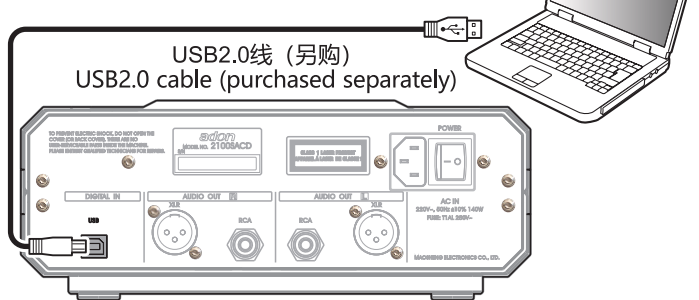

计算机 (系统要求)

Computer (System requirements)

操作系统

Operating system

- Windows 7 或更高版本
Windows 7 or later.

- 使用macOS操作系统时可不安装驱动程序。
You do not need to install driver software when using the macOS operating system.

USB

- USB 2.0 : USB 高速/USB 音频级版本 2.0
USB 2.0: USB High speed /USB Audio level version 2.0.


1 安装Windows驱动程序。

Install the Windows driver.

1 从adon网站 (www.adonhifi.com) “下载” 区的2100SACD页面下载驱动 (ADON_UsbAudio_v5.12.0) 到您的计算机上。

Download the driver (ADON_UsbAudio_v5.12.0) to your computer from page 2100SACD in the Downloads section of the adon website (www.adonhifi.com).

2 按照屏幕上的提示进行下一步操作完成安装。 Follow the on-screen prompts to the next step to complete the installation.

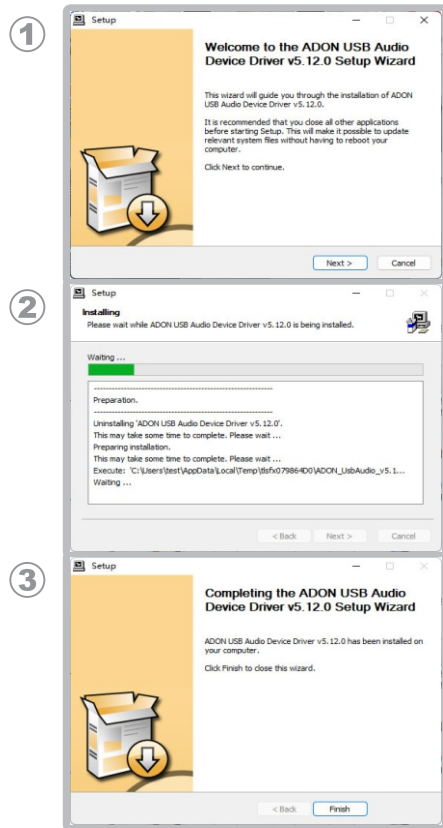

2 连接计算机。 Connect the computer.

- 将USB线连接到计算机与本机USB端口。
Connect USB cable to computer with local USB port.

3 收听计算机音频。 Listen to computer audio.

1 接通电源。 Turn on the power.

2 按INPUT键(前面板) 或Source键 (遥控器) 切换播放模式为"USB"。 Press the INPUT button (front panel) or the Source button (remote control) to switch the play mode to "USB".

3 使用计算机上的音乐应用程序通过2100SACD播放音频。 Use the music application on your computer to play audio through the 2100SACD.

- 在计算机的声音输出设备中选择ADON Device。
Select ADON Device in your computer's sound output device.

开始欣赏!

Start enjoying!

操作说明书 Operating instruction

- 有关其他功能信息和操作步骤详情, 请参阅使用指南。
For additional functional information and step-by-step details, see the user guide.



- 有关更多信息, 请访问 www.adonhifi.com。
For more information, please visit www.adonhifi.com.

adon[®]

2100SACD 202601 01B

Copyright © 2025 Foshan Maosheng Electronics Co., Ltd. All Rights Reserved.