



2100SACD

Compact Disc Player

快速入門指南

Quick start guide

請先讀我

Please read me first

歡迎

Welcome

謝謝您選購adon 2100SACD播放機。

本指南為您設定提供逐步說明。

Thank you for purchasing the adon 2100SACD player.

 
This guide provides step-by-step instructions for you to set up.

開始之前

Before the start




包裝盒中物品清單

List of items in the box

 2100SACD CD player	碟壓 Disc pressure	
	減震腳墊 x6 Spike pad	
遙控器 Remote control		

基本連接所需物品

  Items required for basic connection

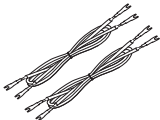 AMP (另購) Power amplifier (purchased separately)	 揚聲器 (另購) Speaker (purchased separately)	 揚聲器電纜 (另購) Speaker cable (purchased separately)	 電源線 (另購) Power cable (purchased separately)
--	---	--	--

- 請注意，本手冊中的插圖為示意圖，可能與實物有差異。
- Please note that the illustrations in this manual are schematic diagrams and may differ from the actual product.

設定步驟

Setup steps


設定過程包括四個步驟。

The setup process includes four steps.

- 1** AMP連接揚聲器
AMP Connected speakers.
- 2** 2100SACD連接到AMP
2100SACD connects to AMP.
- 3** 連接電源
Connect the power supply.
- 4** 播放音樂
Play music.

1 AMP連接揚聲器





AMP Connected speakers.

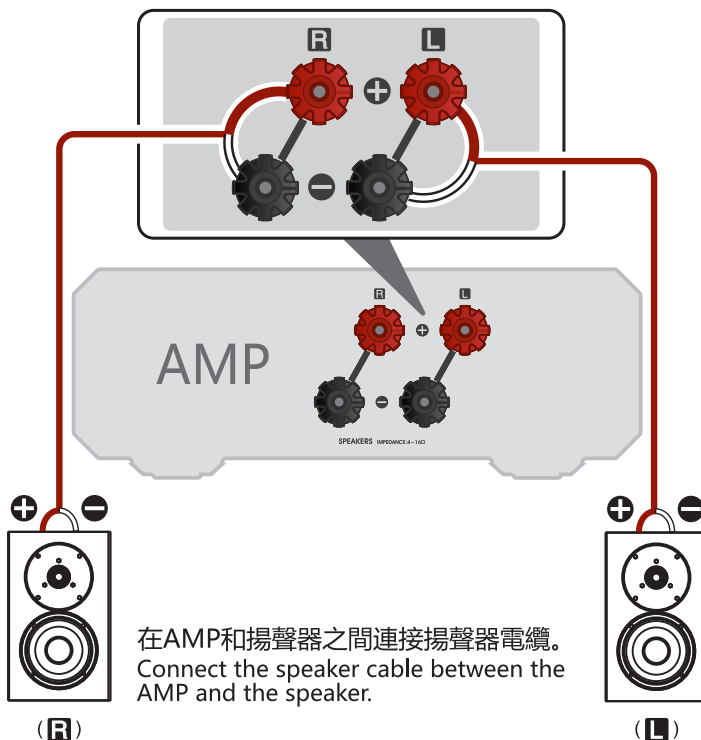

2

2100SACD连接到AMP

2100SACD connects to AMP.

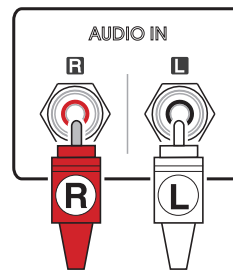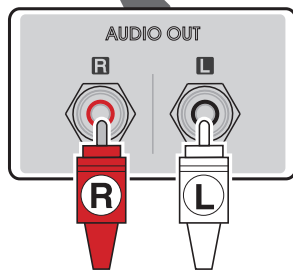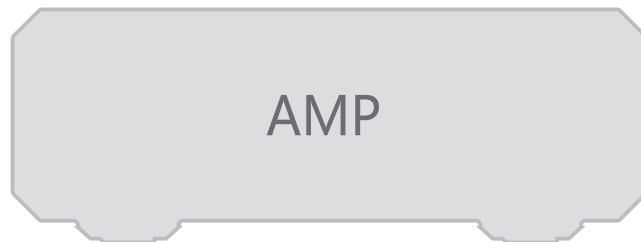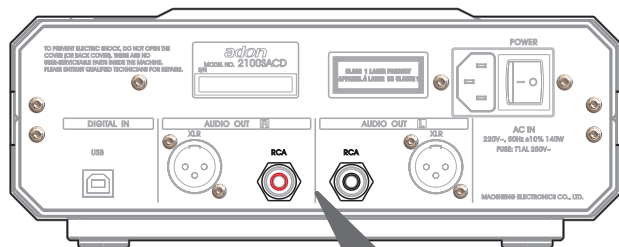


音訊電纜 (RCA)
Audio cable (RCA)

(另購)
(Purchased separately)

3

連接電源

Connect the power supply.

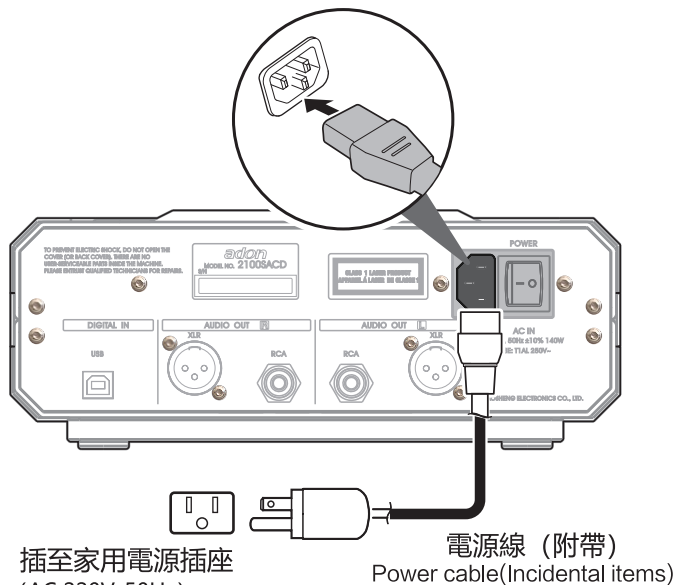

插至家用電源插座
(AC 220V, 50Hz)
Plug into the household
power outlet

4

播放音樂

Play music.

播放CD

Play CD.

1

向後推動碟蓋打開碟倉，放入CD並關閉碟倉。


Push the disc cover back to open the disc compartment, insert the CD, and close the disc cover.



2

按下電源開關開機（後面板）。


Press the power switch on the rear panel.

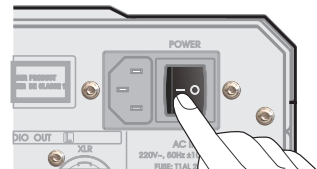

3


按 ►/|| 鍵（前面板）或 ►/|| 鍵（遙控器）播放CD，其間可用 ◀◀ 鍵/ ▶▶ 鍵進行選曲。

Press the ►/|| button (front panel) or the ►/|| button (remote control) to play the CD, during which the ◀◀ button / ▶▶ button can be used to select music.

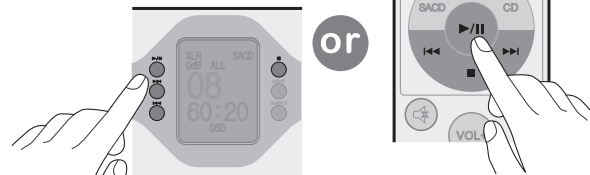

通過USB收聽電腦音訊

Listen to computer audio via USB.

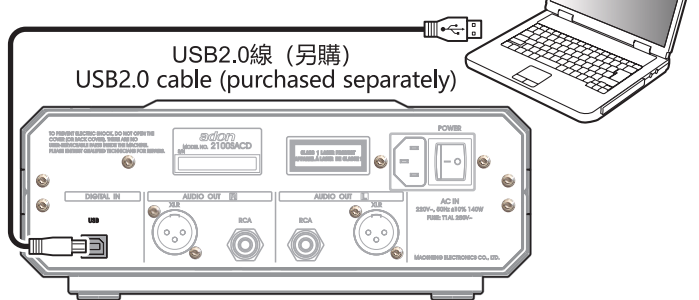

電腦 (系統要求)

Computer (System requirements)

作業系統

Operating system

- Windows 7 或更高版本
Windows 7 or later.

- 使用macOS作業系統時可不必安裝驅動軟件。
You do not need to install driver software when using the macOS operating system.

USB

- USB 2.0 : USB 高速/USB 音訊級版本 2.0
USB 2.0: USB High speed /USB Audio level version 2.0.


1 安裝Windows驅動軟件。

Install the Windows driver.

1 從adon網站 (www.adonhifi.com) “下載” 區的2100SACD頁面下載驅動 (ADON_UsbAudio_v5.12.0) 到您的電腦上。

Download the driver (ADON_UsbAudio_v5.12.0) to your computer from page 2100SACD in the Downloads section of the adon website (www.adonhifi.com).

2 按照螢幕上的提示進行下一步操作完成安裝。 Follow the on-screen prompts to the next step to complete the installation.

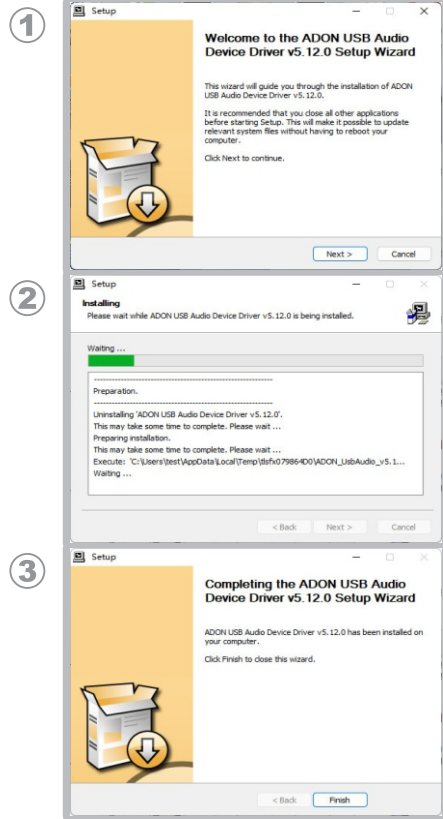

2

連接電腦。

Connect the computer.

- 將USB線連接到電腦與本機USB埠。
Connect USB cable to computer with local USB port.

3

收聽電腦音訊。

Listen to computer audio.

1

接通電源。

Turn on the power.

2

按INPUT鍵(前面板) 或Source鍵 (遙控器) 切換播放模式為"USB"。

Press the INPUT button (front panel) or the Source button (remote control) to switch the play mode to "USB".

3

使用電腦上的音樂應用程序通過2100SACD播放音訊。

Use the music application on your computer to play audio through the 2100SACD.

- 在電腦的聲音輸出設備中選擇ADON Device。
Select ADON Device in your computer's sound output device.

開始欣賞!

Start enjoying!

操作說明書

Operating instruction

- 有關其他功能資訊和操作步驟詳情，請參閱使用指南。
For additional functional information and step-by-step details, see the user guide.



- 有關更多資訊，請訪問 www.adonhifi.com。
For more information, please visit www.adonhifi.com.

adon[®]

2100SACD 202601 01C

Copyright © 2025 Foshan Maosheng Electronics Co., Ltd. All Rights Reserved.