



2200SACD

Compact Disc Player

使用指南



序言

感谢您选购本款 adon 产品。为确保正确操作，使用该产品前请仔细阅读使用指南。

简体中文

序言	2
用户指南	3
安全使用	4-5
使用上的注意事项	6
功能	7-9
操作说明	10-12
故障诊断	13-14
技术参数	15

用户指南

关于如何将2200SACD 并入现有的音频系统，请参考该指南的操作章节。

包装

2200SACD

2200SACD PSU

遥控器

碟压

减震脚垫

支持

本产品的最新信息 (系统要求及兼容性信息等) 请查看茂盛电子官方网站。

另外，关于修理和操作方法的咨询请联系客服支持。

安全使用



注 意
触电危险，
请勿打开。



注意：为防电击，请勿打开机盖(或后盖)。本机内部无使用者可以维修的部件。请委托有资格的技术人员进行维修。



此符号表示有重要的操作和维护说明。



这个标志是警告，如果不以适当的电压使用设备，可能会触电。



注意：高温表面，请勿触摸。

在本产品连续运作时，内部散热器顶部的表面温度可能会很高。

请勿触摸高温区域。

使用产品的时候，请遵循以下使用上的注意事项

1. 请务必阅读说明。
2. 请务必遵守注意事项。
3. 请遵守所有警告。
4. 按照所有说明进行操作。
5. 请勿在水附近使用。
6. 清洁时，请使用干布。请勿使用液体洗涤剂，因为它会损坏前面板控件并导致危险情况。
7. 按照说明手册进行安装。

激光警告

本机使用激光射线。

不按照规定的方法使用、调整及操作，很可能会受到激光辐射的危害。

请勿拆开机壳自行修理。有问题请交给专业维修人员。

CLASS 1 LASER PRODUCT
1 类 激 光 产 品

安全使用

8. 请勿放置在任何会发热的设备附近，例如加热设备，炊具或其他音乐设备，包括放大器。
9. 正确使用电源插头，以免发生危险。如果与您的插座形状不符，请专家更换插座。
10. 请注意不要误踩或挤压电源线。特别要注意设备的插头部分，插座和输出部分。
11. 仅使用制造商指定的附件/配件。
12. 请放在音响器材专用的底架、支架、桌子上使用。安装时，请注意电缆的连接和设备的安装方法不要造成损伤或故障。
13. 在雷雨天或长时间不使用时，请拔下本设备的电源。
14. 有关维修和售后服务，请联系专门的服务中心。如果电源线或插头损坏，如果液体洒在设备上，或者设备被雨淋或受潮，则设备将无法正常工作。发生故障时，需要维修。
15. 本设备即使正常运行也会产生热量，因此请使其与周围的固定装置保持至少15 cm的距离，并在通风良好的地方使用。
16. 如果将本设备以高音量长时间使用它，则可能会发生听力损失。
(如果您感到听力下降或耳鸣，请咨询专科医生。)
17. 请勿将本设备放置在会接触水的地方。请勿在设备上放置盛有液体的物品，例如花瓶、罐装饮料和咖啡杯。
18. 警告：为减少火灾或电击的危险，请勿暴露于雨中或高温下。

使用上的注意事项

- 在开机之前 请确认所有的连接都正确可靠地连接着
即使电源处于关断状态，一部分电路也会继续供电。
长期不使用本产品的情况下，请把电源线从插座上拔掉。
- 关于通风 在长时间通风不足的情况下或在有大量烟尘的环境中使用
如果继续，灰尘会积聚在光学阅读镜上，并且无法正常工作。
- 关于结露 如果主机内部的温度与安装环境之间的温差较大，水滴将出现在内部
(操作部件)。可能会附着(结露)。如果本机凝结使用，则可能无法正常工作并可能导致故障。如果形成冷凝水，请关闭本机并将其放置1至2个小时，然后再使用。
- 关于移动主机 移动本机之前，请务必关闭电源并拔下电源线。
接下来，在移动主机之前，拔下所有连接本机的电缆。
- 关于护理 用软布轻轻擦拭机柜和控制面板。
使用化学药品(例如清洁剂)时，请遵循预防措施。有机溶剂(例如汽油，稀释剂和杀虫剂)粘附在设备上
请勿使用它，因为它可能会导致变质或褪色。

功能

2200SACD 前面板



1. 碟仓。

2. 显示屏：显示当前操作等信息。

显示通道

显示信号
幅值

显示音频
信息

CD (PCM)
SACD (DSD)
MQA (OFS, MQA)



显示反相状态

显示曲目循环

显示曲目/输入源

显示曲目时间/状态

3. ►/|| 键：播放曲目/暂停曲目。

4. ►►| 键：播放下一曲目。

5. |◄◄ 键：播放上一曲目。

6. ■ 键：停止播放。

7. INPUT 键：选择输入源。

↺ CD - USB ↻


8. OUTPUT 键：选择输出通道。

↺ XLR 0dB - XLR 6dB - RCA 0dB - RCA 6dB ↻

9. 遥控感应窗：接收来自遥控器的信号。

功能

2200SACD 后面板

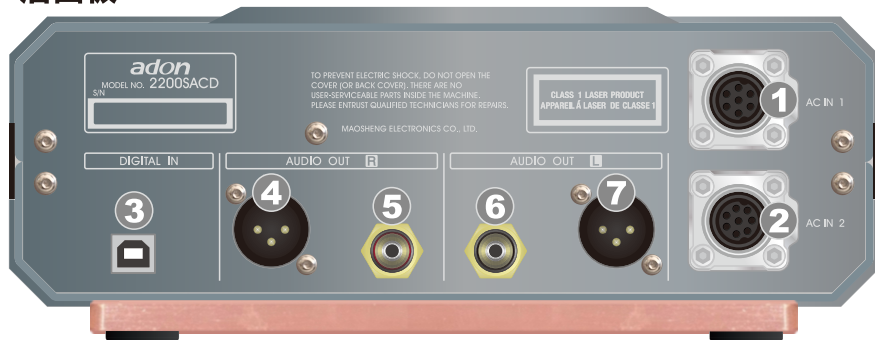

1. 电源插座端子AC IN 1

连接电源输出线AC OUT 1，提供电源。

2. 电源插座端子AC IN 2

连接电源输出线AC OUT 2，提供电源。

3. USB 接入端子

连接到电脑上的USB端子，用于安装有WINDOWS7或以上系统的电脑。安装USB驱动软件，可传输电脑上的音频至本机器进行播放。驱动软件可在官方网站下载：

www.adonhifi.com/cn/tech-support/download_

4. 模拟音频 (XLR) 输出端子 (右声道)

5. 模拟音频 (RCA) 输出端子 (右声道)

6. 模拟音频 (RCA) 输出端子 (左声道)

7. 模拟音频 (XLR) 输出端子 (左声道)


功能

2200SACD PSU


前面板



后面板

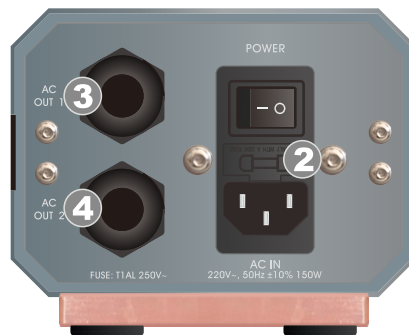

1. 电源指示灯
2. 交流电引入插座
连接附属的电源线，提供电源。
3. 电源输出线 AC OUT 1
连接电源插座端子AC IN 1。
4. 电源输出线 AC OUT 2
连接电源插座端子AC IN 2。

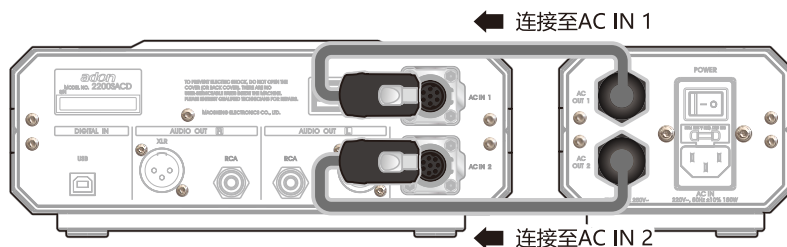

操作说明

遥控器



1. 输出键：通道切换。
↺ XLR 0dB - XLR 6dB - RCA 0dB - RCA 6dB ↻
2. 模式键：
用于切换单曲重复 (↺ONE↻)、全部重复 (↺ALL↻) 或重复关闭 (ALL)。
3. 反相键：将机器输出的信号反相。
4. 音源键：选择输入源。
↺ CD - USB ↻
5. 系统键：用于执行播放相关的操作。

注

- 遥控器未标示按键非本机功能，操作无效属正常现象。
- 即使电源切断，输出通道设定也将保留在机器记忆中。

操作说明

播放USB (支持MQA)

1. 把USB线连接到PC与本机USB端口。
2. 按下电源开关开机 (2200SACD PSU 后面板)。
3. 按INPUT键 (前面板) 或Source键 (遥控器) 切换播放模式为"USB"。
4. PC的声音输出设备中选择ADON Device, 启动PC的播放器软件进行播放。


注 WINDOWS系统支持WINDOW7及以上系统, 并且在使用之前请先安装USB驱动软件 (ADON_UsbAudio_v5.12.0), 驱动软件可在官方网站下载 www.adonhifi.com/cn/tech-support/download。

播放CD (MQA-CD /CD /SACD)

1. 连接 (XLR) 输出端子或 (RCA) 输出端子。
2. 打开碟仓并放入CD。
3. 按下电源开关开机 (2200SACD PSU 后面板)。
4. 按INPUT键 (前面板) 或Source键 (遥控器) 切换播放模式为"CD", 显示屏显示"READ"。
5. 按▶/⏮键 (前面板) 或▶/⏮键 (遥控器) 播放CD, 其间可用◀◀键 / ▶▶键进行选曲。

注

- 碟盖向后推动为打开碟仓, 向前拉动为关闭碟仓。
- 在开机状态下, 当碟盖没有关闭时, 机器显示屏显示 "OPEN" 提示关闭碟盖。
- 机器显示屏显示 "READ" 提示时, 请不要打开碟仓。

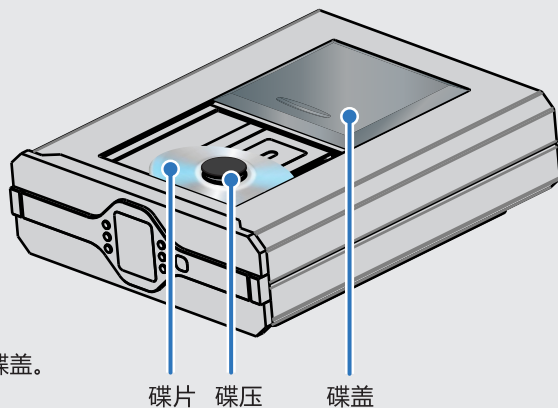

操作说明

播放CD (MQA-CD /CD /SACD)



- 将CD带有标签的一面朝上。
- 放入CD时，务必确保碟仓完全打开。
- 将CD放入托盘定位槽后，垂直放入碟压。
- 如果装入了无法播放的CD或CD上下面装反，则机器显示屏上将显示"NO CD"。
- 在播放过程中，会出现短暂的读碟。音源切换时，将出现这种情况。这不是故障。

注

- 所有连接完成之前，请将电源开关置于关闭位置。
- 连接时确保接触良好，防止因插头松动而造成对音质的损害。
- 请勿将电源线与连接线捆扎在一起，否则会产生杂音。
- 在候用期间，将消耗功率。若要切断电源，请将电源开关置于关闭位置。

故障诊断

若出现故障，首先检查以下事项：

1. 连接是否正确？
2. 本机是否按照操作说明书的指示操作？
3. 其他设备正常运行吗？

若本机运转不正常，请先核对下表中各项。如果问题仍不能解决，可能本机有故障。在这种情况下应立即关闭电源，并与购得本机的商家联系。

【概要】

症状	原因/解决方案
电源无法开启。	• 检查电源线是否正确连接。 • 将电源线插入电源插座。 • 将电源开关置于打开位置。
无法播放。	• 无光碟插入。插入光碟。 • 播放机内部或光盘上有冷凝物吗？（断电后静置 1 到 2 个小时） • 当光碟被刮伤或印有手指印，光碟可能无法正确播放。 请清洁光碟，或取无刮伤光碟替代。 • 光碟是否正面朝下加载？请正确加载光碟，播放面朝下。 • 是否加载了不可播放光碟？

故障诊断

症状	原因/解决方案
无声或声音无法辨清。	• 音频输出是否正确选择？ • 请检查所连设备和扬声器的音频连接。 • 检查扬声器电缆是否已正确连接。 • 调节音量。 • 取消静音模式。
遥控器无法执行操作。	• 电池耗尽。更换为新电池。 • 在距本机约 6 米的距离以内的 20°角范围内操作遥控器。 • 移开本机和遥控器之间的任何障碍物。 • 机器的遥控感应窗受强光直射。将机器移至遥控感应窗不受强光直射的地方。
USB通道无法识别。	• WINDOWS系统未安装驱动。安装USB驱动程序。 • USB连接线没有达到标准。请选择标准的USB2.0 连接线。 • PC的USB端口不稳定。请更换用于连接的端口。 • 操作可能不适用于某些计算机硬件和软件配置。

技术参数

2200SACD

类型:	SACD/CD 播放机
输出电平:	2.5V (RCA) , 2.7V (XLR)
信噪比:	100dB (RCA) , 110dB (XLR)
失真度:	0.02% 1kHz (RCA) , 0.005% 1kHz (XLR)
分离度:	100dB (RCA) , 110dB (XLR)
频率响应:	20Hz~20kHz (± 0.5 dB)
遥控距离:	≤ 6 m
尺寸:	252(W)x99(H)x360(D)mm
重量:	9.6kg

2200SACD PSU

类型:	电源
电源输入:	AC220V~ /50Hz $\pm 10\%$
整机功耗:	150W
尺寸:	118(W)x97(H)x370(D)mm
重量:	5.2kg

产品规格及设计若因改进而有所变化, 恕不另行通知。

序言

感謝您選購本款 adon 產品。為確保正確操作，使用該產品前請仔細閱讀使用指南。

序言	2
使用者指南	3
安全使用	4-5
使用上的注意事項	6
功能	7-9
操作說明	10-12
故障診斷	13-14
技術參數	15

使用者指南

關於如何將2200SACD 併入現有的音訊系統，請參攷該指南的操作章節。

包裝

2200SACD

2200SACD PSU

遙控器

碟壓

減震腳墊

支持

本產品的最新資訊 (系統要求及相容性資訊等) 請查看茂盛電子官方網站。

另外，關於修理和操作方法的諮詢請聯系客服支持。

安全使用



注 意
触电危险，
请勿打开。



注意：為防電擊，請勿打開機蓋(或後蓋)。本機內部無使用者可以維修的部件。請委託有資格的科技人員進行維修。



此符號表示有重要的操作和維護說明。



這個標誌是警告，如果不以適當的電壓使用設備，可能會觸電。



注意：高溫表面，請勿觸摸。

在本產品連續運作時，內部散熱器頂部的表面溫度可能會很高。
請勿觸摸高溫區域。

使用產品的時候，請遵循以下使用上的注意事項

1. 請務必閱讀說明。
2. 請務必遵守注意事項。
3. 請遵守所有警告。
4. 按照所有說明進行操作。
5. 請勿在水附近使用。
6. 清潔時，請使用幹布。請勿使用液體洗滌劑，因為它會損壞前面板控制項並導致危險情況。
7. 按照說明手冊進行安裝。

雷射警告

本機使用雷射射線。

不按照規定的方法使用、調整及操作，很可能會受到雷射輻射的危害。
請勿拆開機殼自行修理。有問題請交給專業維修人員。

CLASS 1 LASER PRODUCT
1 類雷射產品

安全使用

8. 請勿放置在任何會發熱的設備附近，例如加熱設備，炊具或其他音樂設備，包括放大器。
9. 正確使用電源插頭，以免發生危險。如果與您的插座形狀不符，請專家更換插座。
10. 請注意不要誤踩或擠壓電源線。特別要注意設備的插頭部分，插座和輸出部分。
11. 僅使用製造商指定的附件/配件。
12. 請放在音響器材專用的底架、支架、桌子上使用。安裝時，請注意電纜的連接和設備的安裝方法不要造成損傷或故障。
13. 在雷雨天或長時間不使用時，請拔下本設備的電源。
14. 有關維修和售後服務，請聯系專門的服務中心。如果電源線或插頭損壞，如果液體灑在設備上，或者設備被雨淋或受潮，則設備將無法正常工作。發生故障時，需要維修。
15. 本設備即使正常運行也會產生熱量，因此請使其與周圍的固定裝置保持至少15 cm的距離，並在通風良好的地方使用。
16. 如果將本設備以高音量長時間使用它，則可能會發生聽力損失。
(如果您感到聽力下降或耳鳴，請諮詢專科醫生。)
17. 請勿將本設備放置在會接觸水的地方。請勿在設備上放置盛有液體的物品，例如花瓶、罐裝飲料和咖啡杯。
18. 警告：為減少火灾或電擊的危險，請勿暴露於雨中或高溫下。

使用上的注意事項

在開機之前

請確認所有的連接都正確可靠地連接著
即使電源處於關斷狀態，一部分電路也會繼續供電。

關於通風

長期不使用本產品的情況下，請把電源線從插座上拔掉。
在長時間通風不足的情況下或在有大量煙塵的環境中使用
如果繼續，灰塵會積聚在光學閱讀鏡上，並且無法正常工作。

關於結露

如果主機內部的溫度與安裝環境之間的溫差較大，水滴將出現在內部
(操作部件)。可能會附著(結露)。如果本機凝結使用，則可能無法正常工作並可能導致故障。如果形成冷凝水，請關閉本機並將其放置
1至2個小時，然後再使用。

關於移動主機

移動本機之前，請務必關閉電源並拔下電源線。
接下來，在移動主機之前，拔下所有連接本機的電纜。

關於護理

用軟布輕輕擦拭主機殼和控制台。
使用化學藥品(例如清潔劑)時，請遵循預防措施。有機溶劑
(例如汽油，稀釋劑和殺蟲劑)粘附在設備上
請勿使用它，因為它可能會導致變質或褪色。

功能

2200SACD 前面板



1. 碟倉。

2. 顯示幕：顯示當前操作等資訊。

顯示通道
顯示訊號
幅值



顯示反相狀態

顯示曲目迴圈

顯示曲目/輸入源

顯示曲目時間/狀態

顯示音訊
訊息

CD (PCM)
SACD (DSD)
MQA (OFS, MQA)

3. ►/|| 鍵：播放曲目/暫停曲目。

4. ►►| 鍵：播放下一曲目。

5. |◄◄ 鍵：播放上一曲目。

6. ■ 鍵：停止播放。

7. INPUT 鍵：選擇輸入源。

↺ CD - USB ↻

8. OUTPUT 鍵：選擇輸出通道。

↺ XLR 0dB - XLR 6dB - RCA 0dB - RCA 6dB ↻

9. 遙控感應窗：接收來自遙控器的訊號。

功能

2200SACD 後面板



1. 電源插座端子AC IN 1
連接電源輸出線AC OUT 1，提供電源。
2. 電源插座端子AC IN 2
連接電源輸出線AC OUT 2，提供電源。
3. USB接入端子
連接到電腦上的USB端子，用於安裝有WINDOWS7或以上系統的電腦。安裝USB驅動軟件，可傳輸電腦上的音訊至本機器進行播放。驅動軟件可在官方網站下載：
www.adonhifi.com/cn/tech-support/download。
4. 類比音訊 (XLR) 輸出端子 (右聲道)
5. 類比音訊 (RCA) 輸出端子 (右聲道)
6. 類比音訊 (RCA) 輸出端子 (左聲道)
7. 類比音訊 (XLR) 輸出端子 (左聲道)


功能

2200SACD PSU


前面板



後面板

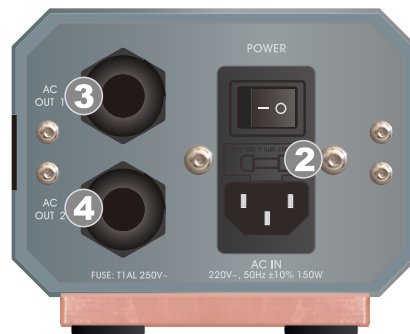

1. 電源指示燈
2. 交流電引入插座
連接附屬的電源線，提供電源。
3. 電源輸出線 AC OUT 1
連接電源插座端子AC IN 1。
4. 電源輸出線 AC OUT 2
連接電源插座端子AC IN 2。

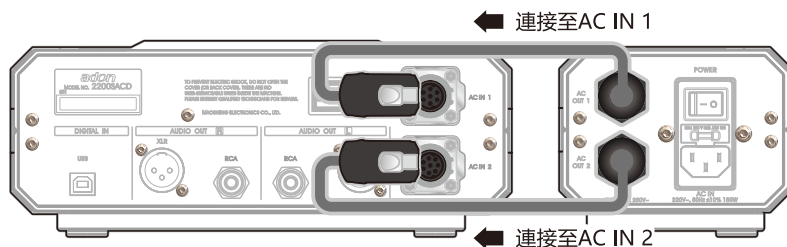

操作說明

遙控器



1. 輸出鍵：通道切換。
↶ XLR 0dB - XLR 6dB - RCA 0dB - RCA 6dB ↷
2. 模式鍵：
用於切換單曲重複 (↶ONE↷) 、全部重複 (↶ALL↷) 或重複關閉 (ALL) 。
3. 反相鍵：將機器輸出的訊號反相。
4. 音源鍵：選擇輸入源。
↶ CD - USB ↷
5. 系統鍵：用於執行播放相關的操作。

注

- 遙控器未標示按鍵非本機功能，操作無效屬正常現象。
- 即使電源切斷，輸出通道設定也將保留在機器記憶中。

操作說明

播放USB (支持MQA)

1. 把USB線連接到PC與本機USB埠。
2. 按下電源開關開機 (2200SACD PSU 後面板)。
3. 按INPUT鍵 (前面板) 或Source鍵 (遙控器) 切換播放模式為"USB"。
4. PC的聲音輸出設備中選擇ADON Device，啟動PC的播放機軟件進行播放。


注 WINDOWS系統支援WINDOW7及以上系統，並且在使用之前請先安裝USB驅動軟件 (ADON_UsbAudio_v5.12.0)，驅動軟件可在官方網站下載 www.adonhifi.com/cn/tech-support/download。

播放CD (MQA-CD /CD /SACD)

1. 連接 (XLR) 輸出端子或 (RCA) 輸出端子。
2. 打開碟倉並放入CD。
3. 按下電源開關開機 (2200SACD PSU 後面板)。
4. 按INPUT鍵 (前面板) 或Source鍵 (遙控器) 切換播放模式為"CD"，顯示幕顯示"READ"。
5. 按▶/||鍵 (前面板) 或▶/||鍵 (遙控器) 播放CD，其間可用◀◀鍵 / ▶▶鍵進行選曲。

注

- 碟蓋向後推動為打開碟倉，向前拉動為關閉碟倉。
- 在開機狀態下，當碟蓋沒有關閉時，機器顯示幕顯示 "OPEN" 提示關閉碟蓋。
- 機器顯示幕顯示 "READ" 提示時，請不要打開碟倉。

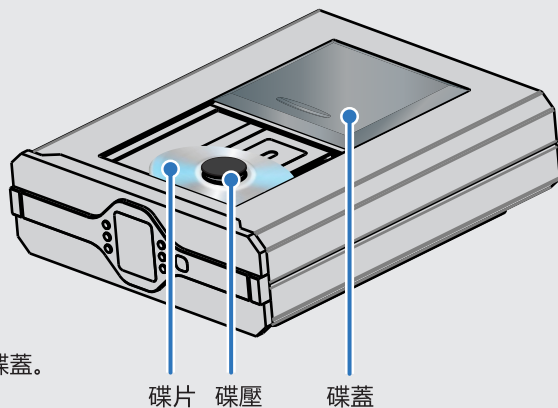

操作說明

播放CD (MQA-CD /CD /SACD)



- 將CD帶有標籤的一面朝上。
- 放入CD時，務必確保碟倉完全打開。
- 將CD放入託盤定位槽後，垂直放入碟壓。
- 如果裝入了無法播放的CD或CD上下麵裝反，則機器顯示幕上將顯示"NO CD"。
- 在播放過程中，會出現短暫的讀碟。音源切換時，將出現這種情況。這不是故障。

注

- 所有連接完成之前，請將電源開關置於關閉位置。
- 連接時確保接觸良好，防止因插頭鬆動而造成對音質的損害。
- 請勿將電源線與連接線捆紮在一起，否則會產生雜音。
- 在候用期間，將消耗功率。若要切斷電源，請將電源開關置於關閉位置。

故障診斷

若出現故障，首先檢查以下事項：

1. 連接是否正確？
2. 本機是否按照操作說明書的訓示操作？
3. 其他設備正常運行嗎？

若本機運轉不正常，請先核對下錶中各項。如果問題仍不能解決，可能本機有故障。
在這種情況下應立即關閉電源，並與購得本機的商家聯系。

【概要】

症狀	原因/解決方案
電源無法開啟。	• 檢查電源線是否正確連接。 • 將電源線插入電源插座。 • 將電源開關置於打開位置。
無法播放。	• 無光碟插入。插入光碟。 • 播放機內部或光碟上有冷凝物嗎？（斷電後靜置 1 到 2 個小時） • 當光碟被刮傷或印有手指印，光碟可能無法正確播放。 請清潔光碟，或取無刮傷光碟替代。 • 光碟是否正面朝下加載？請正確加載光碟，播放面朝下。 • 是否加載了不可播放光碟？

故障診斷

症狀	原因/解決方案
無聲或聲音無法辨清。	• 音訊輸出是否正確選擇？ • 請檢查所連設備和揚聲器的音訊連接。 • 檢查揚聲器電纜是否已正確連接。 • 調節音量。 • 取消靜音模式。
遙控器無法執行操作。	• 電池耗盡。更換為新電池。 • 在距本機約 6 米的距離以內的 20°角範圍內操作遙控器。 • 移開本機和遙控器之間的任何障礙物。 • 機器的遙控感應窗受強光直射。將機器移至遙控感應窗不受強光直射的地方。
USB通道無法識別。	• WINDOWS系統未安裝驅動。安裝USB驅動程序。 • USB連接線沒有達到標準。請選擇標準的USB2.0連接線。 • PC的USB埠不穩定。請更換用於連接的埠。 • 操作可能不適用於某些電腦硬體和軟件配真。

技術參數

2200SACD

類型：	SACD/CD 播放機
輸出電平：	2.5V (RCA) , 2.7V (XLR)
信噪比：	100dB (RCA) , 110dB (XLR)
失真度：	0.02% 1kHz (RCA) , 0.005% 1kHz (XLR)
分離度：	100dB (RCA) , 110dB (XLR)
頻率回應：	20Hz~20kHz (±0.5dB)
遙控距離：	≤6m
尺寸：	252(W)x99(H)x360(D)mm
重量：	9.6kg

2200SACD PSU

類型：	電源
電源輸入：	AC220V~/50Hz ±10%
整機功耗：	150W
尺寸：	118(W)x97(H)x370(D)mm
重量：	5.2kg

產品規格及設計若因改進而有所變化，恕不另行通知。

Preface

Thank you for choosing this adon product. To ensure correct operation, please read the user guide carefully before using this product.

Preface	2
User's guide	3
Safe use	4-5
Precautions for use	6
Features	7-9
Instructions	10-12
Troubleshooting	13-14
Technical parameters	15

User's Guide

For how to incorporate 2200SACD into an existing audio system, please refer to the operation chapter of this guide.

Package

2200SACD

2200SACD PSU

Remote control

Disc stabilizer

Spike pad

Stand by

For the latest information of this product (system requirements and compatibility information, etc.), please check the official website of Maosheng Electronics.

In addition, please contact customer service support for inquiries about repairs and operating methods.

Safe use



注 意
触电危险，
请勿打开。



Note: To prevent electric shock, do not open the cover (or back cover). There are no user-serviceable parts inside the machine. Please entrust qualified technicians for repairs.



This symbol indicates that there are important operation and maintenance instructions.



This sign is a warning, if you do not use the equipment at the proper voltage, you may get an electric shock.



Note: Do not touch hot surfaces.

During continuous operation of this product, the surface temperature on the top of the internal radiator may be very high.

Do not touch hot areas.

Laser Warning

This machine uses laser rays.

If it is not used, adjusted and operated in accordance with the prescribed methods, it is likely to be harmed by laser radiation. Do not open the case to repair yourself. If you have any problems, please refer to professional maintenance personnel.

When using the product, please follow the following precautions for use

1. Be sure to read the instructions.
2. Be sure to follow the precautions.
3. Observe all warnings.
4. Follow all instructions.
5. Do not use near water
6. When cleaning, use a dry cloth. Do not use liquid detergent as it can damage the front panel controls and cause dangerous conditions
7. Follow the instruction manual for installation.

CLASS 1 LASER PRODUCT
1 类 激 光 产 品

Safe use

8. Do not place near any equipment that generates heat, such as heating equipment, cookware or other musical equipment, including amplifiers.
9. Use the power plug correctly to avoid danger. If it does not match the shape of your socket, ask an expert to replace the socket.
10. Please be careful not to step on or squeeze the power cord by mistake. Pay special attention to the plug part, socket and output part of the device.
11. Only use attachments/accessories specified by the manufacturer.
12. Please use it on the chassis, stand, or table dedicated to audio equipment. When installing, please pay attention to the cable connection and the installation method of the device not to cause damage or malfunction.
13. Please unplug the device when it is not in use for a long time during a thunderstorm.
14. For maintenance and after-sales service, please contact a dedicated service center. If the power cord or plug is damaged, if liquid is spilled on the device, or the device is exposed to rain or moisture, the device will not work properly. When a malfunction occurs, repair is required.
15. This equipment will generate heat even in normal operation, so please keep it at least 15 cm away from the surrounding fixtures and use it in a well-ventilated place.
16. If this device is used at a high volume for a long period of time, hearing loss may occur. (If you experience hearing loss or tinnitus, consult a specialist.)
17. Do not place this product in a place exposed to water. Do not place objects filled with liquids, such as vases, canned drinks and coffee cups, on the device.
18. Warning: To reduce the risk of fire or electric shock, do not expose to rain or high temperature.

Precautions for use


Before booting	Please confirm that all connections are correctly and reliably connected. Even if the power is off, some circuits will continue to supply power. If you do not use this product for a long time, please unplug the power cord from the socket.
About ventilation	Use in the case of insufficient ventilation for a long time or in an environment with a lot of smoke and dust. If you continue, it may not work properly.
About condensation	If there is a large temperature difference between the temperature inside the host and the installation environment, water droplets will appear inside (Operation parts). It may adhere (condensation). If the unit is used in condensation, it may not work properly and may cause a malfunction. If condensation forms, turn off the unit and leave it for 1 to 2 hours before using it.
About mobile hosts	Before moving the machine, be sure to turn off the power and unplug the power cord. Next, before moving the main unit, unplug all cables connected to this unit.
About nursing	Gently wipe the chassis and control panel with a soft cloth. When using chemicals (such as detergents), follow precautions. Organic solvents (Such as gasoline, thinner, and insecticide) adhering to the device. Do not use it because it may cause deterioration or discoloration.

Features

2200SACD Front panel




1. Disc compartment.
2. Display: displays the current operation information.

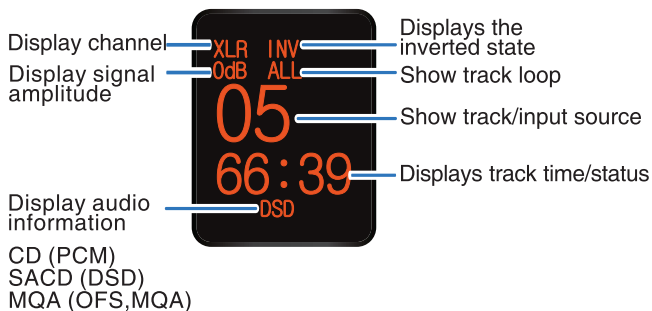

3. ►/|| button: play track/pause track.
4. ►►| button: play the next track.
5. |◄◄ button: play the previous track.
6. ■ button: stop playing.
7. INPUT button: select input source.
◀ CD - USB ▶
8. OUTPUT button: Selective output channel.
◀ XLR 0dB - XLR 6dB - RCA 0dB - RCA 6dB ▶
9. Remote control induction window: receive signal from remote control.

Features

2200SACD Back panel

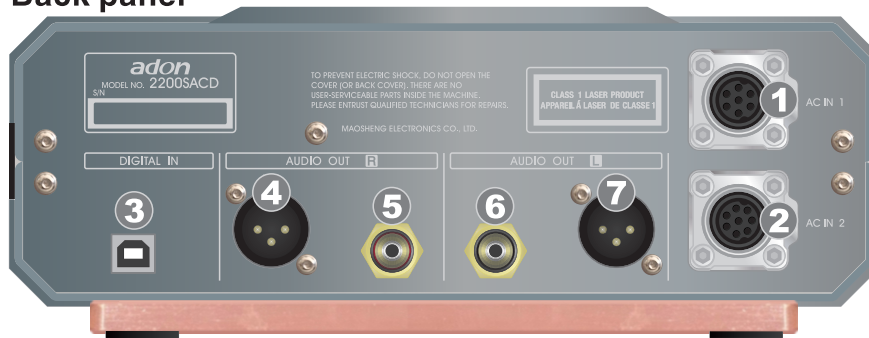

1. Power socket terminal AC IN 1
Connect the power output cable AC OUT 1 to provide power.
2. Power socket terminal AC IN 2
Connect the power output cable AC OUT 2 to provide power.
3. USB access terminal
USB terminal connected to a computer for computers with WINDOWS7 or above. Install USB driver software, you can transfer the audio on the computer to the machine for playback. The driver software can be downloaded from the official website:
www.adonhifi.com/cn/tech-support/download.
4. Analog Audio (XLR) output terminal (right channel).
5. Analog Audio (RCA) output terminal (right channel).
6. Analog Audio (RCA) output terminal (left channel).
7. Analog Audio (XLR) output terminal (left channel).


Features

2200SACD PSU


Front panel



Back panel

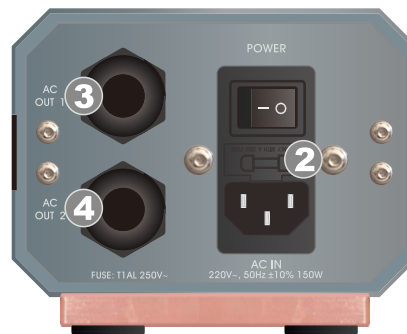

1. Power indicator light.
2. AC power inlet socket.
Connect the attached power cable to provide power.
3. Power output cable AC OUT 1.
Connect the power socket terminal AC IN 1.
4. Power output cable AC OUT 2.
Connect the power socket terminal AC IN 2.

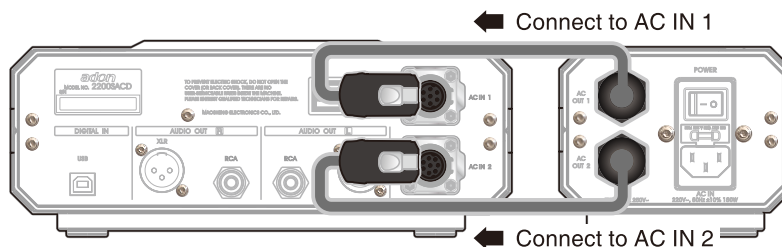

Instructions

Remote control



1. Output button: Channel switch.
↶ XLR 0dB - XLR 6dB - RCA 0dB - RCA 6dB ↷
2. Mode button:
To switch between single repeat (↶ONE↷), all repeat (↶ALL↷)
Or repeat close (ALL).
3. Inverted button: inverting the output signal of the machine.
4. Source button: Select the input source.
↶ CD - USB ↷
5. System button: Used to perform playing-related operations.

Note

- The remote control does not indicate that the button is not a local function, and the operation is invalid.
- Even if the power is cut off, the output channel Settings will remain in the machine memory.

Instructions

Play USB (MQA Support)


1. Connect the USB cable to the USB port on the PC and the 2200SACD.
2. Press the power switch on the rear panel of the 2200SACD PSU.
3. Press the INPUT button (front panel) or the Source button (remote control) to switch the play mode to "USB".
4. Select ADON Device from the sound output device of the PC and start the player software of the PC to play.

Note The WINDOWS system supports Windows 7 and later systems, and please install the USB driver software (ADON_UsbAudio_v5.12.0) before using it. The driver software can be downloaded from the official website: www.adonhifi.com/cn/tech-support/download.

Play CD (MQA-CD /CD /SACD)

1. Connect the (XLR) output terminal or (RCA) output terminal.
2. Open the disc compartment and insert the CD.
3. Press the power switch on the rear panel of the 2200SACD PSU.
4. Press the INPUT button (front panel) or the Source button (remote control) to switch the play mode to "CD", and the display displays "READ".
5. Press the ►/|| button (front panel) or the ►/|| button (remote control) to play the CD, during which the ◀◀/▶▶ button can be used to select music.

- Note**
- Push the disc cover back to open the disc compartment. Push it back to its place to close it.
 - In the startup state, when the disc cover is not closed, the machine display "OPEN" prompts to close the disc cover.
 - Do not open the disc compartment when the "READ" prompt is displayed on the machine display.

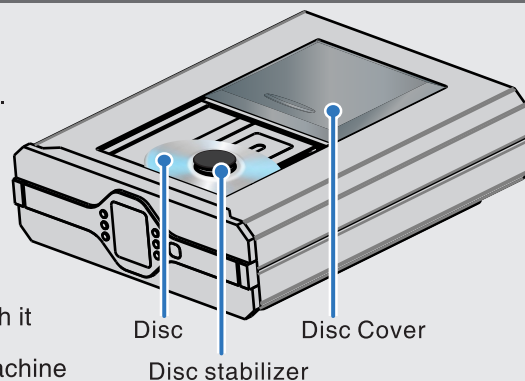

Instructions

Play CD (MQA-CD /CD /SACD)



- Place the labeled side of the CD facing up.
- When placing a CD, make sure that the disc is fully open.
- Put the CD into the tray positioning slot and press the disc vertically.
- If a CD that cannot be played is loaded or the CD is mounted upside down, the machine display will display "NO CD".
- During the playback process, there will be a brief reading of the disc. This situation occurs when the audio source is switched. It's not a malfunction.

Note

- Before all connections are complete, please set the power switch to the off position.
- Ensure good contact when connecting to prevent damage to sound quality due to loose plugs.
- Do not bundle the power cord with the connecting cable, otherwise it will cause noise.
- During the waiting period, power will be consumed. To turn off the power, set the power switch to the off position.

Troubleshooting

If there is a problem, please check the following items first:

1. Is the connection correct?
2. Does the machine follow the instructions in the operating instructions?
3. Are other equipment operating normally?

If the machine does not work normally, please check the items in the following table first. If the problem cannot be solved, the machine may be malfunctioning.

In this case, turn off the power immediately and contact the purchaser.

【Outline】

Symptom	Cause/Solution
The power cannot be turned on.	• Check whether the power cable is correctly connected. • Plug the power cord into a power outlet. • Set the power switch to the on position.
Unable to play.	• No disc inserted. Insert the disc. • Is there condensation inside the player or on the disc? (Let it sit for 1 to 2 hours after power failure) • When the disc is scratched or printed with finger marks, the disc may not play correctly. • Does the disc load face down? Please load the disc correctly, playing side down. • Is a non-playable disc loaded?

Troubleshooting

Symptom	Cause/Solution
No sound or indistinguishable sound.	• Is the audio output selected correctly? • Check the audio connection of the connected device and speaker. • Check that speaker cables are properly connected. • Adjust the volume. • Unmute mode.
The remote control cannot perform operations.	• Battery exhaustion. Replace with a new battery. • Operate the remote control at a 20° Angle within a distance of about 6 meters from the unit. • Remove any obstacles between the unit and the remote control. • The remote sensing window of the machine is exposed to direct light. Move the machine to a place where the remote sensing window is not exposed to direct light.
The USB channel cannot be recognized.	• The driver is not installed in the WINDOWS system. Install the USB driver. • The USB cable does not meet the standard. Please choose a standard USB2.0 cable. • The USB port of the PC is unstable. Please change the port used for connection. • Operations may not be available for some computer hardware and software configurations.

Technical parameters

2200SACD

Types of:	SACD/CD player
Output level:	2.5V (RCA) , 2.7V (XLR)
Signal to noise ratio:	100dB (RCA) , 110dB (XLR)
Distortion:	0.02% 1kHz (RCA) , 0.005% 1kHz (XLR)
Resolution:	100dB (RCA) , 110dB (XLR)
Frequency response:	20Hz~20kHz (±0.5dB)
Remote control distance:	≤ 6m
Size:	252(W)x99(H)x360(D)mm
Weight:	9.6kg

2200SACD PSU

Types of:	Power Supply Unit
Power input:	AC220V~/50Hz ±10%
Power consumption:	150W
Size:	118(W)x97(H)x370(D)mm
Weight:	5.2kg

Product specifications and designs are subject to change without notice due to improvements.

adon[®]



2200SACD 202601 01A

Copyright © 2025 Foshan Maosheng Electronics Co., Ltd. All Rights Reserved.